


POOL LINER INSTALLATION INSTRUCTIONS

Slight wrinkles appearing during the installation of a pool liner is natural. This is caused by an over allowance of vinyl material to avoid damage to the liner if shrinkage should occur.

Smooth out of the floor of the liner by pushing it toward the [above ground pool](#) wall. A soft broom will be helpful. Never force-fully pull or drag the liner.

NOTE: The liner is not a structural part of the pool. Its only function is to keep the water from leaking out of the pool. The water pressure is held by the pool wall and structural parts, not by the liner. The liner must be installed properly with all areas touching the ground, earth mound and pool wall and not supporting the weight of the water which will damage the liner.

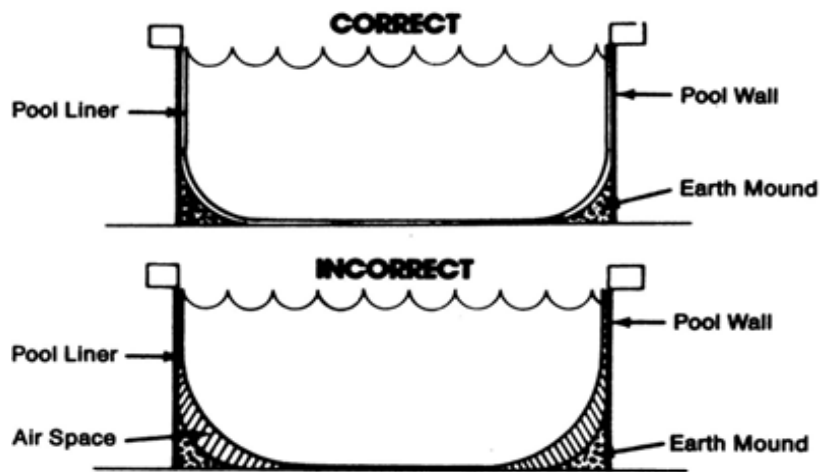

1. Examine the liner to make sure there is no opening in the seam, before filling your pool.
2. Make sure that you put your earth mound around the bottom of the wall to protect the liner from touching the metal frame.
3. Lay out the liner inside the wall properly with all areas touching the ground, earth mound and pool wall. Do not stretch your liner, see diagram above.
4. Hang your liner over the wall making sure that there is no tension on the liner.
5. Follow instructions in your pool manual about how to set up the liner.
6. **ATTENTION HOME OWNER: BE SURE TO ATTACH "DO NOT DIVE" STICKER TO YOUR LINER TWO INCHES ABOVE THE WATER LEVEL SO IT IS CLEARLY VISIBLE.**