



MX8 Disassembly Instructions – Step by Step Guide

Disassembly: Removing the Top Cover

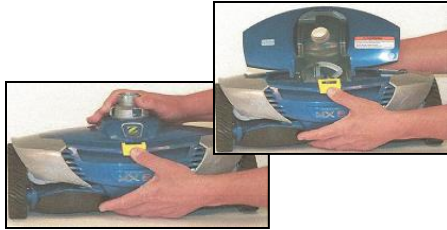


1. Press the yellow button on the front of the cleaner head. Open the top cover.

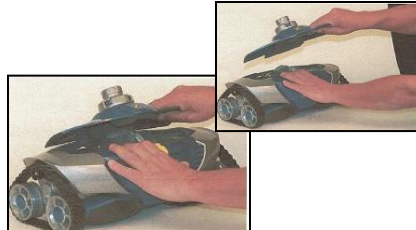

2. Grasp the top cover while holding the cleaner body of the cleaner down securely. Pull the top cover to remove from the cleaner body.

Disassembly: Removing the Engine Assembly

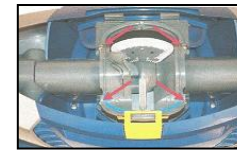

1. Unscrew the 4 screws holding the middle engine housing in.



2. Remove the middle engine housing.



3. Remove engine assembly.



4. Remove drive shaft & keyed bearings from the engine assembly.

Disassembly: Removing Track



1. Remove the track by lifting it over the wheel/wheels & pulling.

Disassembly: Removing Scrubber Assembly



1. Align arrows on the scrubber assembly & housing to locate the screw in the hole.



2. Unscrew to remove the scrubber assembly.

Disassembly: Removing Wheels & Bearings



1. Using a small screw driver, press in on the locking tab located on the wheel pin from the top of the cleaner head.



2. Using the inserted screwdriver, slide the wheel & pin from the housing.



3. Remove the bearings from the wheels..

Disassembly: Removing Direction Control Devices



1. Unscrew & lift off the body panel assembly.



2. Unscrew the direction control assembly from the body panel.



3. Separate the direction control assembly from the body panel.



Note: The right side of the chassis, the right body panel, & the right direction control assembly are all marked with the letter "A" for easy assembly.



The left side of the chassis, the left body panel, & the left direction control assembly are all marked with the letter "B" for easy assembly.