


PRODUCT APPLICATION

TYPICAL POOL DECK APPLICATION

FIGURE #1 (TOP VIEW)

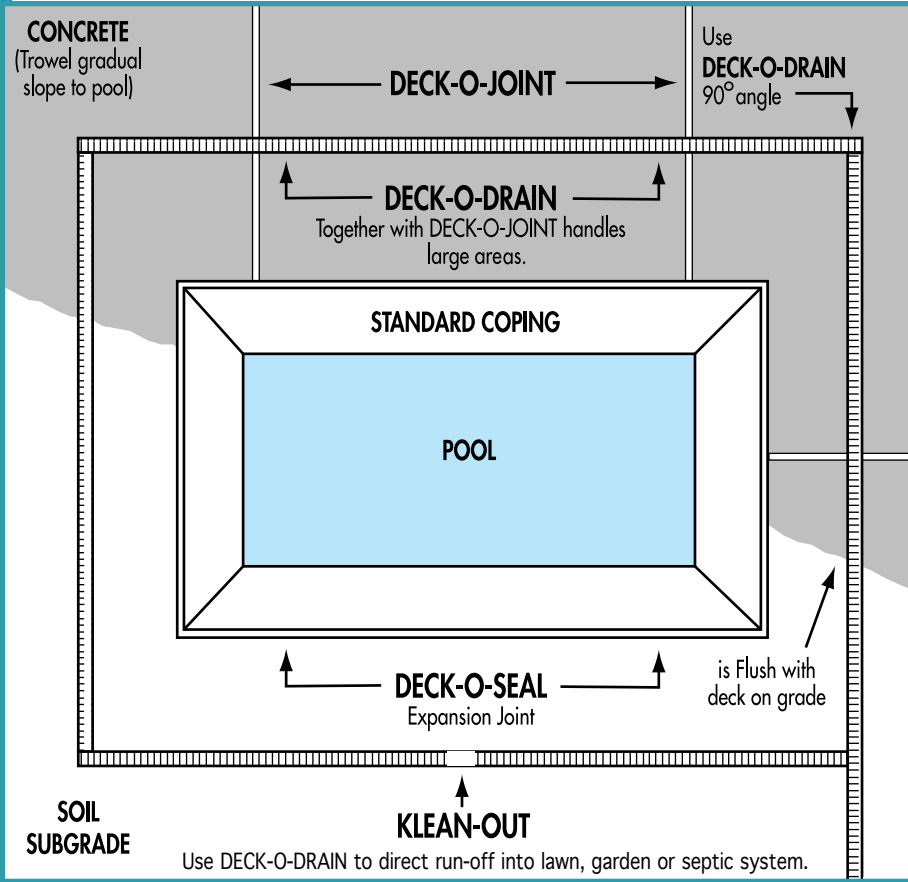

PRODUCT APPLICATION DIRECTIONS

DECK-O-DRAIN installation is quick and easy.

STEP ONE -Grade sub-soil, sloping it toward drain location.

STEP TWO -Along planned path for drain, drive 3/2" wide, short stakes into the ground. Space them 30 inches apart. Two nailing clips per each 10 ft. section.

STEP THREE -Attach snap-on nailing clips and place drain over the stakes. Use couplers to ensure a straight, even line.

STEP FOUR -After carefully aligning, nail firmly to stakes.

STEP FIVE -Insert adapter. Can be hooked to 1/2" or 2" PVC pipe. Pipe can be adapted to any direction.

STEP SIX -Place concrete and trowel gradual slope to DECK-O-DRAIN.

STEP SEVEN -After concrete has set, install end plug, remove protective tape and drain is ready to carry water away.

FIGURE #2 (SIDE VIEW)



MIDDLE FLOW-AWAY SYSTEM.

FIGURE #3 (SIDE VIEW)




DRAIN-TO-WALL SYSTEM.

PRODUCT ACCESSORIES


DECK-O-DRAIN accessories are available for simplified job site installation.

L H
2 1/2" x 2 1/4"

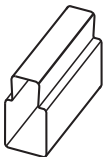


COUPLING

L H
3" x 1 3/4"

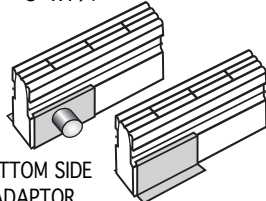


BOTTOM SIDE ADAPTOR

L H
3" x 1 3/4"

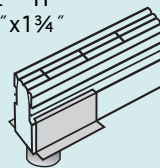


BOTTOM DOWN ADAPTOR

L H
8" x 3 1/4"

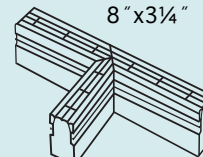


TEE FITTING

L H
8 1/4" x 3 1/4"

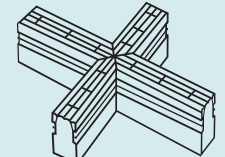


CROSS FITTING

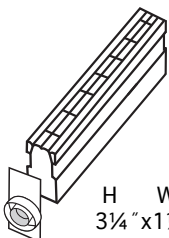

H W
3 1/4" x 1 1/2"


END PIPE ADAPTOR

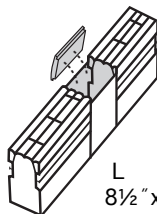

L H
8 1/2" x 3 1/4"


KLEAN OUT

H W
3 1/2" x 1 1/2"

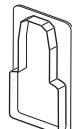

END CAP

L H
4 1/4" x 3 1/4"

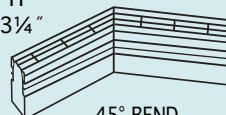

45° BEND

L H
4 3/4" x 3 1/4"



90° BEND

DECK-O-DRAIN Size:

1 1/2" wide x 3 1/4" high x 10' long
(38.1 mm wide x 82.55 mm high x 3.05 m long)